

 
 
《 OPTION 》

PRESSER PAD & SEWING PATTERN SOFT

PRESSER PAD & SEWING PATTERN SOFT  
with EASING

● FLAP RUN-STITCHING

Run-stitching to LEFT/RIGHT FLAP is available  
at the same time.

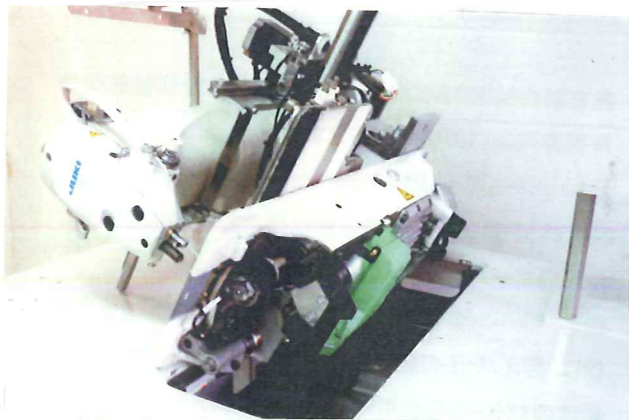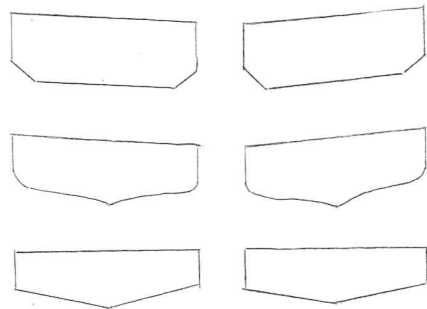


**FLEXIBLE MAINTENANCE**

Simplified Head Tilting and Maintenance  
are allowed.

With MANUAL Mode, Maintenance checking  
on every working step is allowed with  
Pedal stepping on.

When thread is broken, T.B.D. detects  
and makes Sewing cycle stop.

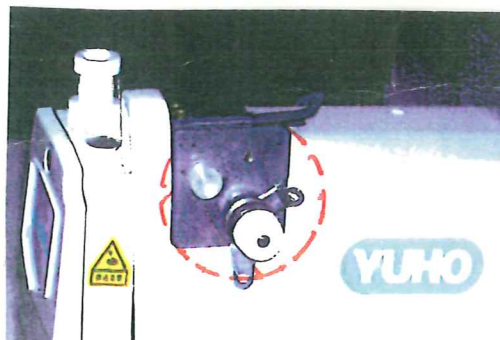

Thread-Breakage Detector makes sew-  
ing cycle instantly when thread is broken  
--- to avoid mishandling in advance.



《 MAIN DEVICE 》

- "LED" TOUCH PANEL
- LEFT/RIGHT START SELECT
- FLAP ATTACH/RUN-STITCH SELECT
- STACKER
- THREAD BREAKAGE DETECTOR
- AIR GUN
- CASTER w/BRAKE

《 SPECIFICATIONS 》

- MACHINE HEAD JUKI DDL-9000B  
(DIRECT DRIVE SINGLE NEEDLE LOCK-STITCH)
- NEEDLE DP x 17 #9 ~ #14
- "XY" MAX FEED STROKE "X" 380mm  
"Y" 110mm
- SEWING SIZE FLAP "L" 200 X "W" 80mm  
FLAP ATTACH "L" 200 X "W" 12mm
- NEEDLE STROKE 35mm
- "XY" FEEDING PULSE MOTOR CSK268 2
- PROGRAM PATTERN FLAP ATTACH 15  
RUN-STITCH 15
- TABLE HEIGHT 940MM
- POWER SUPPLY 200V/AC 460VA
- AIR SUPPLY 5kg/cm<sup>2</sup> 50ℓ/min
- FLOOR SPACE L/1070 x w/1080 x H/1270mm

**YUHO SEWING MACHINE CO., LTD.**

5-chome 3-1, Biwajima,  
Nishi-ku, Nagoya,  
Tel: +81-52-522-6276  
Fax: +81-52-531-9270  
e-mail: yuho@yuhomac.com  
URL: <http://www.yuhomac.com>



**NEW 『 E 』 TYPE**  
**AUTOMATIC FLAP SETTER &**  
**RUN-STITCHING UNIT**  
**MODEL U-3407-E**



**THE LATEST FULLY-AUTOMATIZED U-3407-E**  
**PERFORMS NORMAL & SLANT TYPE FLAP RUN-**  
**STITCHING & ATTACHING EXCLUSIVELY !!**


**U-3407-E** ALLOWS TO SEW RUN-STITCHING & ATTACHING THE  
LEFT/RIGHT SLANT TYPE FLAP FREELY AS WELL AS NORMAL  
PARALLEL TYPE.

**U-3407-E** IS ALLOED TO LINK WITH **U-3103-E** POCKET  
SETTER AND SERVED TO THE SKILLLESS AND HIGH PRODUCT-  
IVITIES.



YUHO SEWING MACHINE

**NEW 『 E 』 TYPE**  
**AUTOMATIC FLAP SETTER &**  
**RUN-STITCHING UNIT**  
**MODEL U-3407-E**

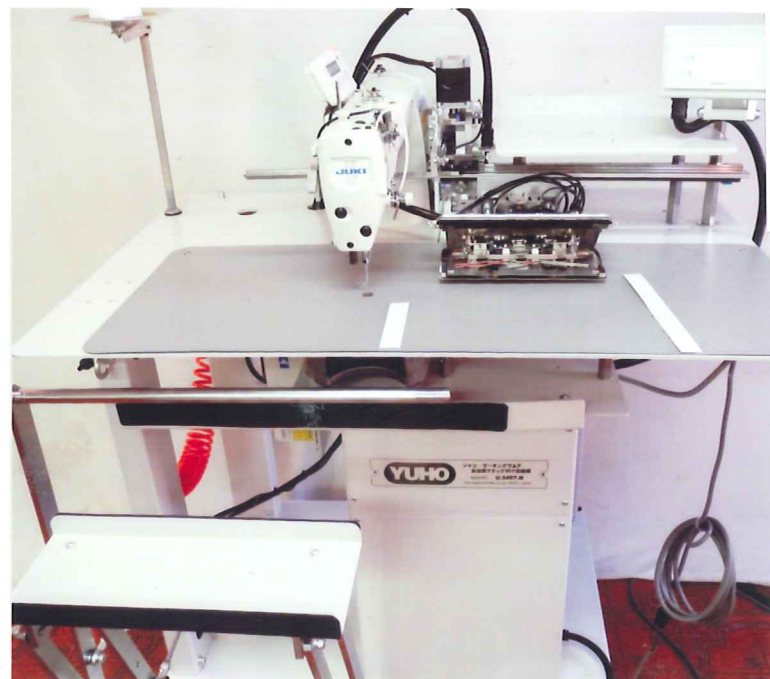

**ACCURATE LOCATING & EASY HANDLING**

When attaching LEFT/RIGHT SLANT FLAP, PEN-HOLDER to the Left Flap & PARALLEL to the Right Flap is selectable automatically. Also, available to attach the same Flap successively. With 2-stage Holding down mechanism, an accurate Flap locating can be checked and starting is promised. PRESSER PAD starting from Left or Right is free of choice by the Operator.




**FULL-AUTO FLAP ATTACHING with PEN HOLDER**

With "XY" Pulse Motor and "LED" Touch Panel Programming, PARALLEL and LEFT/RIGHT SLANT FLAP Attaching, Variable Stitch Margin (Max12mm) is available. "PEN-HOLDER" locating conversion is programmable simply. U-3407-E allows to attach the LEFT/RIGHT with "Double-Stitching PEN-HOLDER" & Large Size FLAP (Max200mm) FLAP attaching is also allowed promises wide variation for FLAP attaching. U-3407-E---NO need of Pattern Gauge making and conversion---saves the cost and the labour !!



**FULLY AUTOMATIZED RUN-STITCHING & ATTACHING THE LEFT/RIGHT SLANT FLAP AS WELL AS NORMAL FLAP**

The latest modified U-3407-E allows to save the Labour of Flap attaching flexibly-----such as attaching Left/RIGHT SLANT FLAP or with the PEN HOLDER---"Double-stitch", "Large size Max.200mm" are also available. Such as Flap Run-stitching, "Superimposed seam", "Easing" ----are also available.

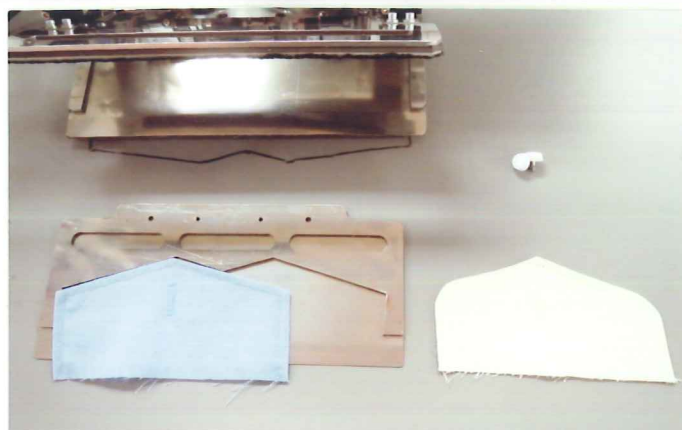


**OPTINAL FLAP PATTERN GAUGE**

According to the Flap Patterns, OPTIONAL FLAP PATTERN GAUGE is required optionally.

**SIMPLIFIED PATTERN GAUGE CONVERSION**

GAUGE Conversion from FLAP Attaching to the FLAP Run-stitching and Sewing Mode are simplified. With "X-Y" Pulse Motor, Pattern Sewing "X-Y" Sewing Size is programmable and adjustable with "CORRECTION" Mode

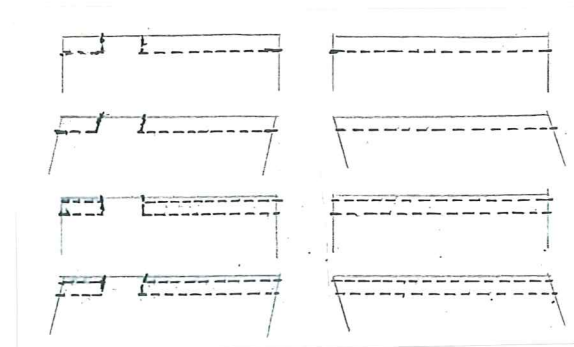

**AUTO L/RIGHT SLANT FLAP ATTACHING**

Left/Right FLAP ATTACHING can be converted automatically. Between Run-stitching and Top-stitching, Starting and Ending position is different according to the Slant angle.



**OVER-LAPPED WORKING w/STACKER**

After FLAP attaching ends, the Fabric is stacked on automatically by the STACKER. While PRESSER PAD returning and Fabric stacking on, Operator can prepare the next FLAP and Fabric loading.

**RUN-STITCHING FLAP with EASING**

PRESSER PAD with EASING Device allows to make the loosen RUN-STITCHING.



**AUTOMATIZED FLAP RUN-STITCHING**

U-3407-E can make both FLAP ATTACHING & RUN-STITCHING. When conversion to RUN-STITCHING, removal of the PRESSER PAD (from FLAP Attaching) is required.



**LEFT/RIGHT SLANT FLAP RUN-STITCHING**

Conversion to Run-stitching to the LEFT/RIGHT SLANT FLAP is also allowed. LEFT to RIGHT FLAP alternatively or separately conversion is also allowed.

**FABRIC LOADING MODE**

- load the Fabric under the PRESSER PAD directly at the Rightside
- load the Fabric on the designed loading position PRESSER PAD is located at the Leftside with this Mode, Overlapped Working is allowed.
- SEWING PATTERNS ---- allowed upto " 15 ". making PRESSER PADS & SEWING PATTERNS is required.
- PRESSER PAD & SEWING PATTERN
- when many Sewing Patterns are used, Loading and Starting is recommended from the Rightside.
- STACKER ---- not allowed.